


Solvision Room Scheduler

Model: SV-RBD-10

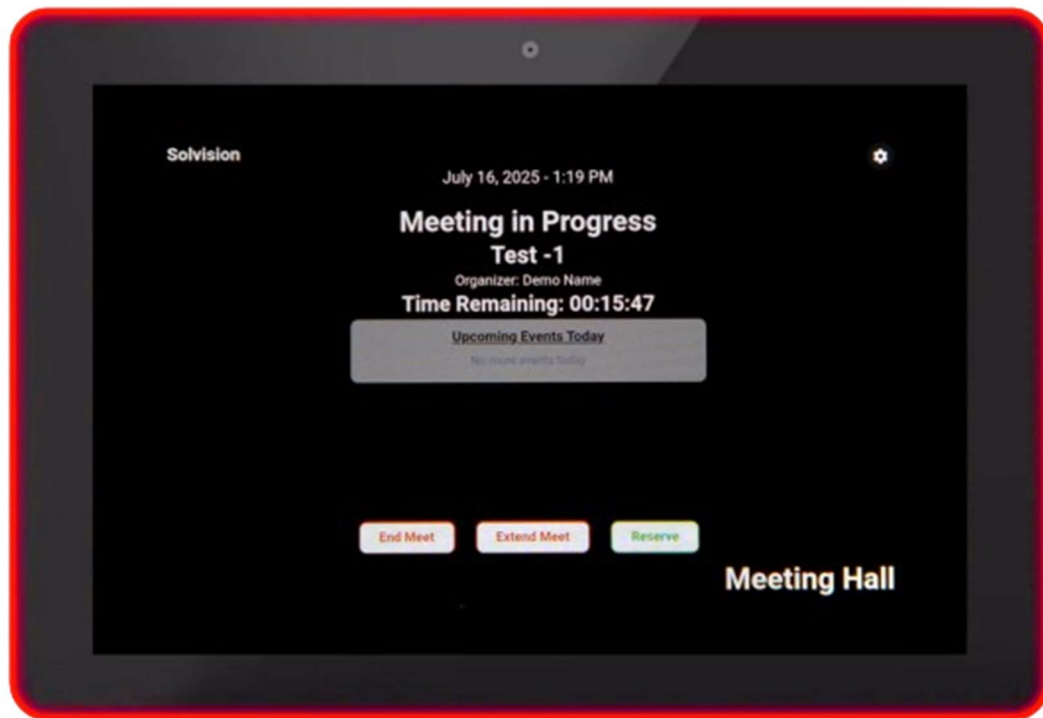

User Manual

Step 1: Configure Network

Room Scheduler device supports multiple network connection modes. Choose one of the following based on your infrastructure Network Setup:

Option A: Power over Ethernet (PoE)

- **Requirements:** PoE-enabled Ethernet port or switch
- **Steps:**
 1. Connect a PoE CAT cable to the device.
 2. The device will power ON and connect automatically.

 **Network Setup Complete - Continue with Step 2**

Option B: Ethernet (Non-PoE)

- **Requirements:** Standard Ethernet connection + Power Adapter (Included in box)
- **Steps:**
 1. Plug in a standard Ethernet cable to the device.
 2. Connect the provided power adapter to the device.
 3. The device will power on and connect automatically.

 **Network Setup Complete - Continue with Step 2**

Option C: Wi-Fi


- **Requirements:** Wi-Fi-enabled network and Power Adapter (Included in box)
(Required: Ethernet network access for initial configuration)
- **Steps:**
 1. If an Ethernet connection via a router or network switch is available, connect it along with the power adapter.

--OR--


If Ethernet connection via router or network switch is unavailable, follow the **Computer Connection Network Setup** mentioned below. Once complete, continue with the remaining steps.

Computer Connection Network Setup


- Connect one end of the Ethernet cable to your PC/Laptop and the other end to the ethernet port of SV-RBD 10.

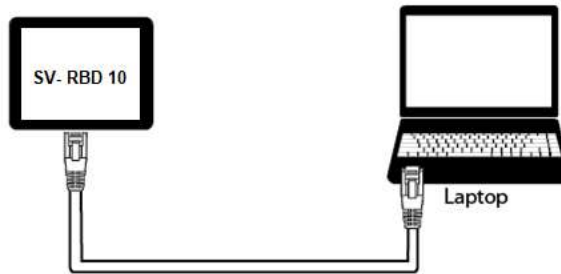

- Connect your PC/Laptop to a working Wi-Fi network or mobile hotspot with internet access.
- In the Windows search bar, type ***“View Network Connections”*** and open it.

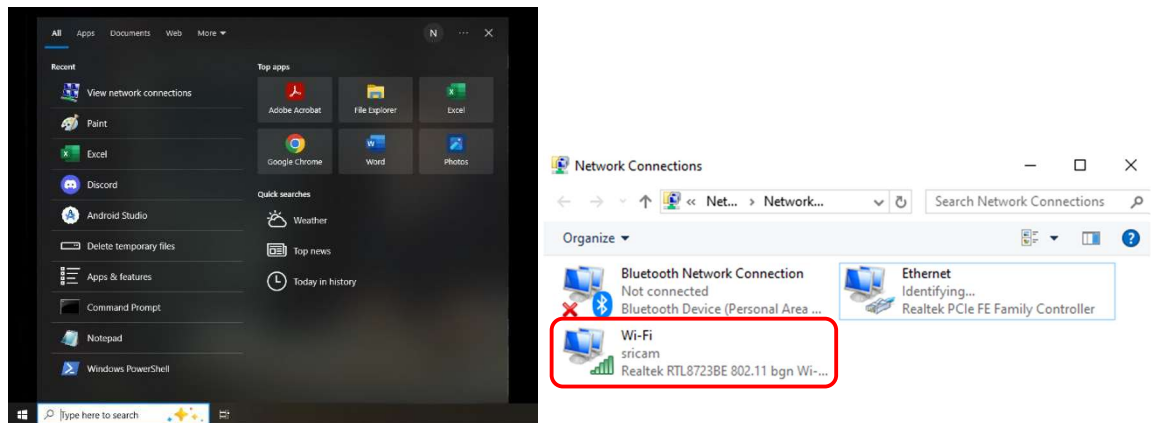


- Right-click on the Wi-Fi adapter, click on Properties.
- Go to the Sharing tab, check ***“Allow other network users to connect through this computer’s Internet connection.”*** Then click OK.

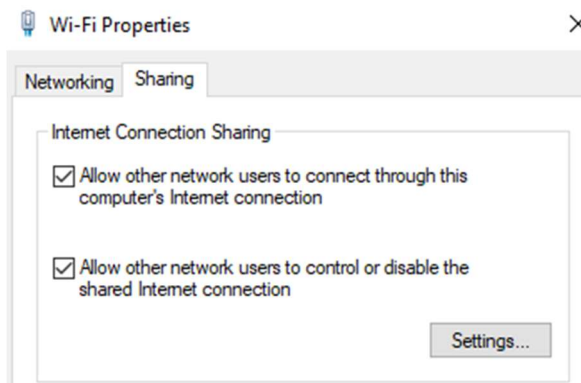


- Done — SV-RBD 10 will now receive internet via the Ethernet connection from your PC/Laptop.


2. Power ON the device and wait for the device to boot up, click the **Settings icon (⚙️)** in the top-right corner of the Solvision Room Scheduler app.

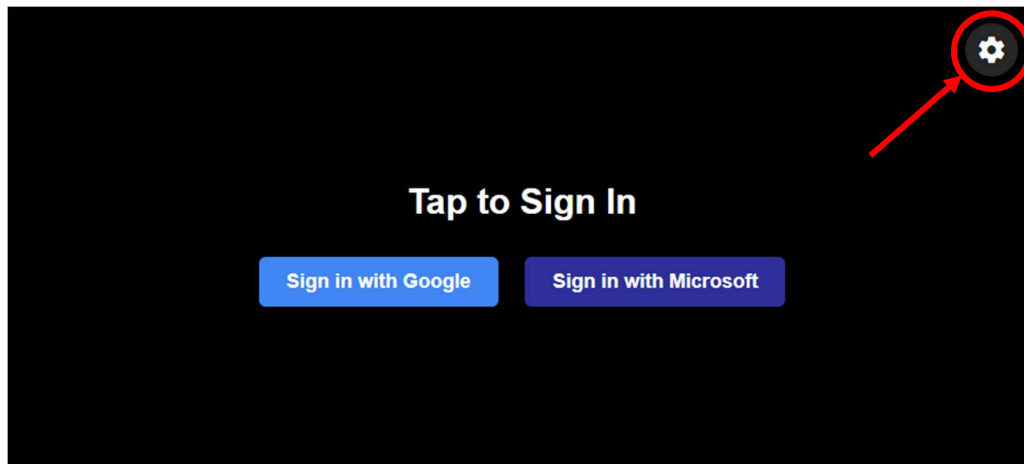


3. Enter password: **XXXX** to access the configuration menu. (Refer Password Card for XXXX)

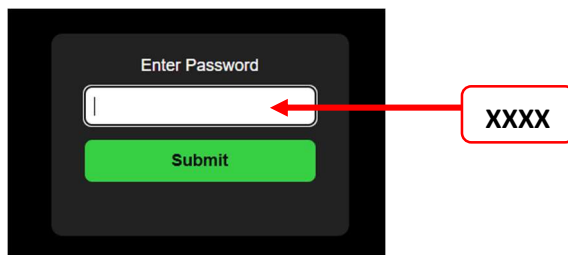

4. Click the 'Configure Network' button (bottom-left).

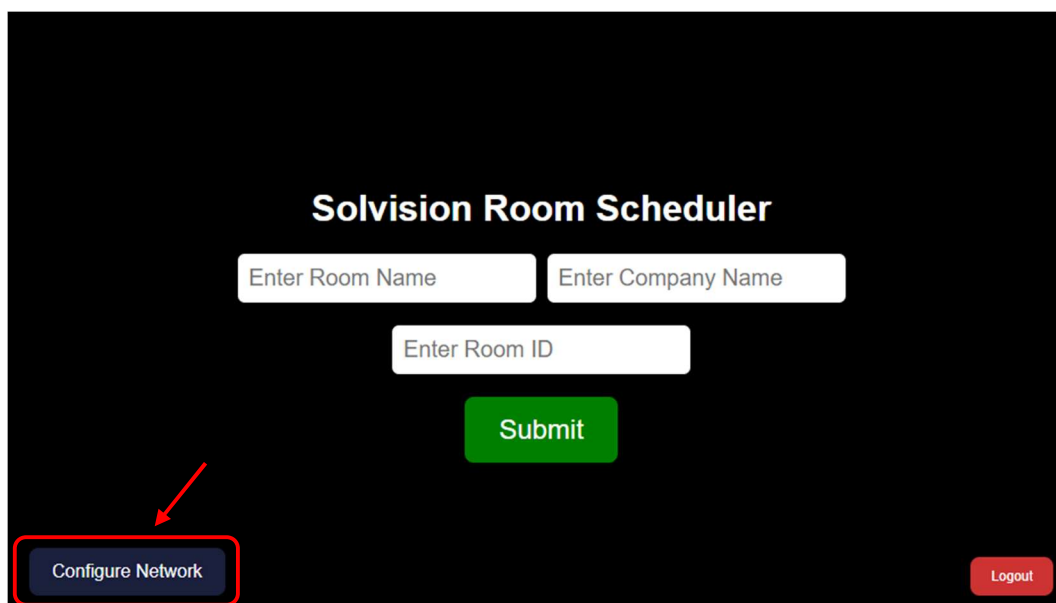

5. Enter password: **YYYY** to temporarily exit Fullscreen mode and access the Android interface. (Refer Password Card for YYYY)

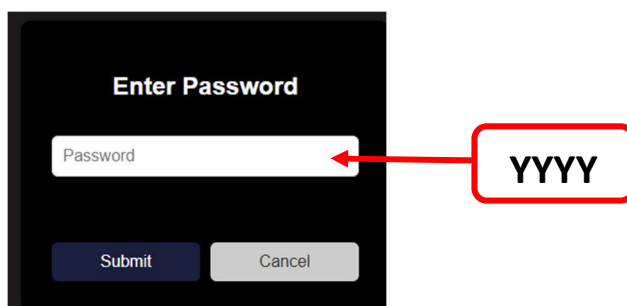


6. Remove the Ethernet cable
7. Open the **Android Settings** app, navigate to **Wi-Fi**, and connect to your desired Wi-Fi network and wait for the connection to show as '**Connected**'.
8. Relaunch the Solvision Room Scheduler app from the home screen.

✅ **Network Setup Complete - Continue with Step 2**

Step 2: Login

⚠️ **Note:** Ensure the device is connected to the internet before proceeding.
If not done already, follow **Step 1: Configure Network** to set up your internet connection.

1. Once connected, you will see the login screen as shown below:

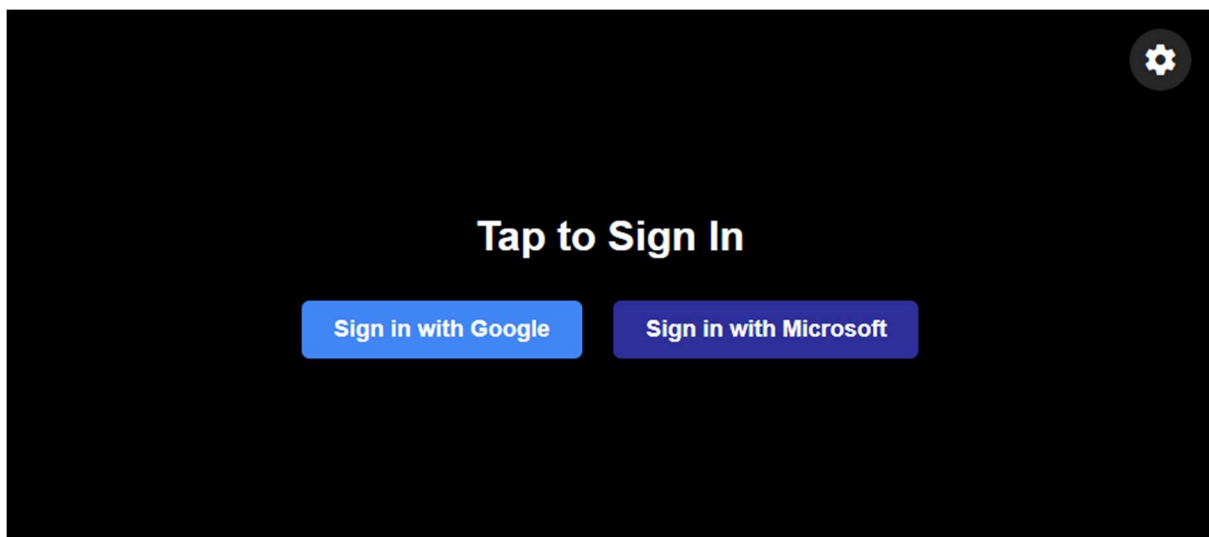

Login Options:

2. Please select one of the following sign-in methods based on your organization's configuration:
 - **Sign in with Google**
 - **Sign in with Microsoft**
3. Follow the on-screen instructions and log in using the assigned **email ID and password**.


💡 **Tip:** If you're unsure about the email credentials or login method, please refer to the **Email Configuration User Manual** provided for your administrator or IT team.

(Please contact salesindia@solvisionav.in for Email Configuration User Manual if required)

✅ **Login Successful**

Step 3: Configure Room Details


1. After logging in, you will be prompted to enter room-specific information. You should see a screen similar to the one below:

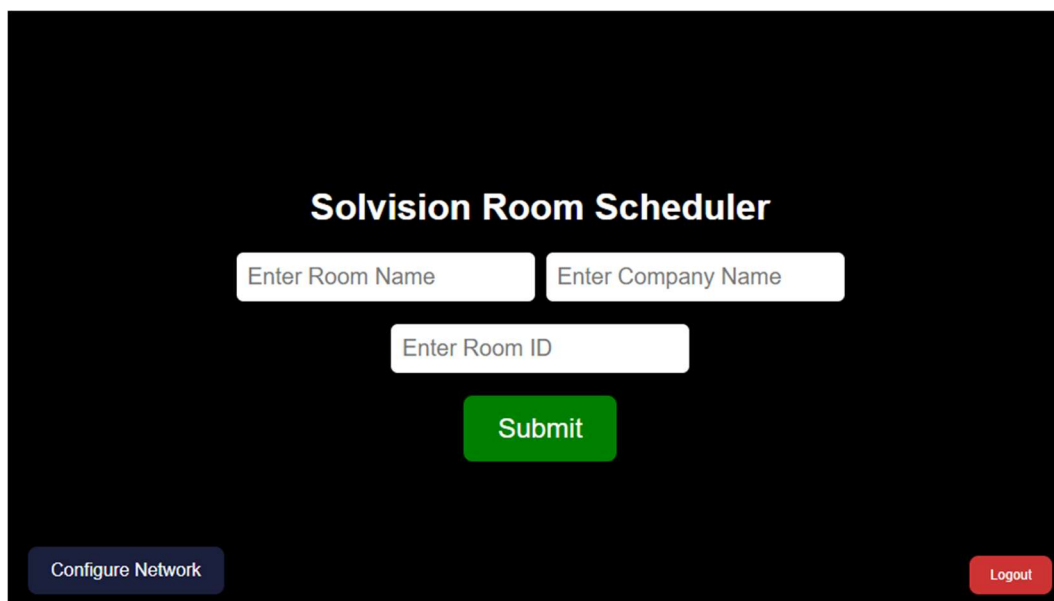

The screenshot shows a dark-themed web interface titled "Solvision Room Scheduler". It features three input fields: "Enter Room Name", "Enter Company Name", and "Enter Room ID". Below these fields is a green "Submit" button. At the bottom left, there is a "Configure Network" button, and at the bottom right, there is a "Logout" button.

Required Fields:

- **Room Name** (e.g., *Conference Hall*)
- **Company Name** (e.g., *Solvision*)
- **Room Email ID** (as provided by your IT team)

 **Tip:** If you're unsure about the email credentials or login method, please refer to the **Email Configuration User Manual** provided for your administrator or IT team.


(Please contact salesindia@solvisionav.in for Email Configuration User Manual if required)

2. Once you've filled out all the details, click **Submit**.

 **All Set!** The device is now fully configured and ready to use.

Error Notice:

If you encounter an error like the one shown below:

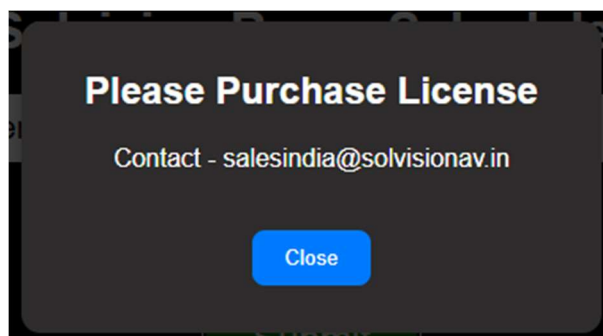

It means that the **Room E-mail ID** you entered does not have a valid license.

Action Required:

Please contact salesindia@solvisionav.in to purchase or verify the license for the room email ID.

Box Inclusions

- **1× SV RBD-10 (Interactive Digital Signage)**
- **1× Power Adapter**
- **1x User Manual**
- **1× Password Card**
- **1x Wall Mounting Accessories**
- **1x Glass Mounting Accessories**